
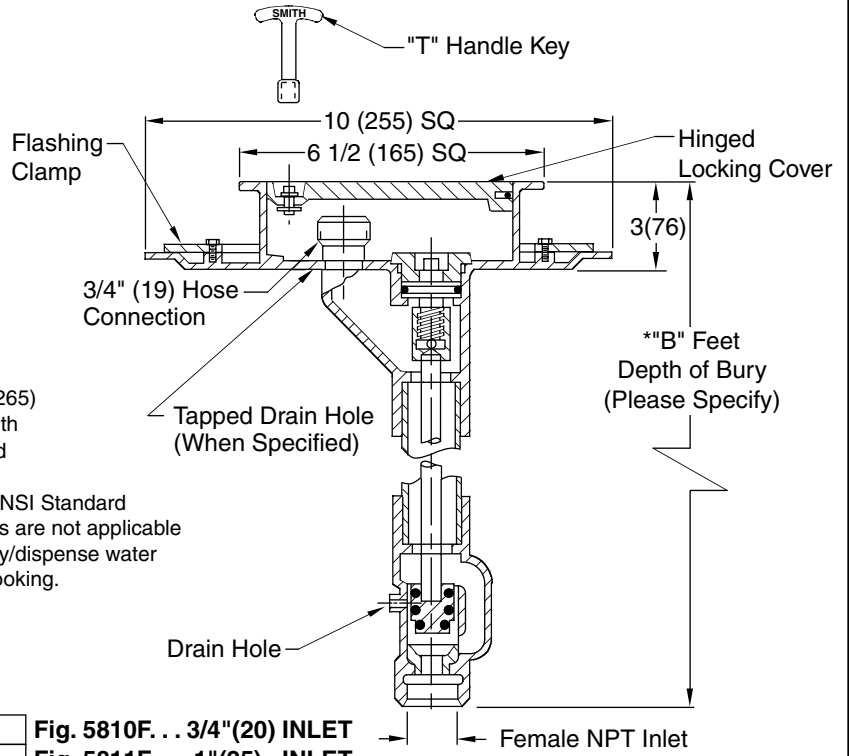


NON-FREEZE GROUND HYDRANT

BOX TYPE WITH INTEGRAL FLASHING FLANGE AND CLAMP

FUNCTION: A Hydrant with a hinged covered box, for positive protection against freezing when buried outside or in unheated areas and the closing valve is located below the frost line. Used in watertight floor construction where an integrally cast flashing flange is required to receive and secure the waterproofing membranes. When hydrant is shut off water is drained from the casing through the drain hole in the valve housing. The locking cover prevents unauthorized use.

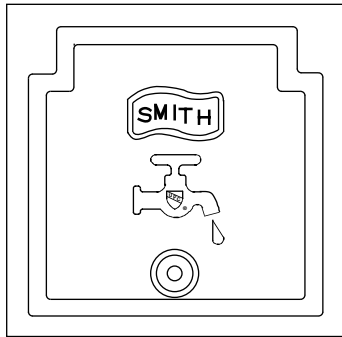

- NOTES:**
1. Recommended Box-out 10 1/2(265) x 10 1/2(265)
 2. All Jay R. Smith hydrants are manufactured with "NO-LEAD" brazing rings and USDA approved lubricants.
 3. The AB1953, California Lead Law, and NSF/ANSI Standard 61-2008 - Drinking Water System Components are not applicable to Jay R. Smith hydrants as they do not convey/dispense water for human consumption through drinking or cooking.
 4. Addition of vacuum breaker will not allow draining of the casing. Smith is not responsible for any casings that burst or related incidents if the hydrant is supplied with a vacuum breaker.
 5. Dimensions shown in parentheses are in millimeters.

Fig. 5810F. . . 3/4"(20) INLET
 Fig. 5811F. . . 1"(25) INLET

REGULARLY FURNISHED:

Bronze Non-Freeze Ground Hydrant with "T" Handle Key, Bronze Hydrant Box with Flashing Flange and Clamp. Inlet Size Furnished as Indicated by Figure Number Selected.

VARIATIONS:

- 1"(25) Hose Connection Adaptor -HC1
- Less Drain Hole -LD
- 1/8"(3) NPT Drain Hole in Box -N
- 1/8"(3) NPT Drain Hole in Valve Housing -NV
- Mild Climate -SAP
- Less Flashing Clamp -LFC
- "Water" Cast on Cover -W

OPTIONAL MATERIALS:

- Nickel Bronze Box -NB
- Polished Bronze Box -PB

B(Depth of Bury) = 02(610), 03(915), 04(1220), 05(1525), 06(1830), 07(2135) or 08(2438) Feet
 *B = 9 1/2"(240) When Specified 5810F-SAP
 *B = 9 1/2"(240) When Specified 5811F-SAP

TECHNICAL DATA

Non-Freeze Ground Hydrants are supplied with a special valve housing which prevents freezing of hydrant during non-use periods. The valve housing must be installed below the frost line which prevails for the area of installation. The valve housing has a drain hole which drains the casing when the hydrant is shut off. In effect, there is no water in the casing during non-use periods. Since water from the drain hole is normally allowed to drain into the ground, the valve housing should be set in a bed of gravel. Water drained from the casing can then seep into the ground.

Some locations which require Non-Freeze Ground Hydrants cannot tolerate water draining from the drain hole. Examples are parking garages, plazas and roof decks used for recreational purposes. Often in these types of applications the valve housing will protrude into a finished area which is not subject to freezing temperatures. To eliminate the problem of water drainage in this type of installation, Smith can supply a tapped drain hole in the hydrant box and a tapped drain hole in the valve housing. Through these tapped drain holes, water accumulation in the box and the water from the valve housing drain hole can be piped to a suitable drain.

5810F, 5811F

DRAWING NUMBER S5810F, SCALE: NONE, DATE: 12-8-88, APPROVED BY: TD, CHECKED BY: VGD, DRAWN BY: WAS, DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE, WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

REV.	DATE	DESCRIPTION	BY	CKD. BY	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 5810F, 5811F

PARTS LIST WITH MAINTENANCE INSTRUCTIONS

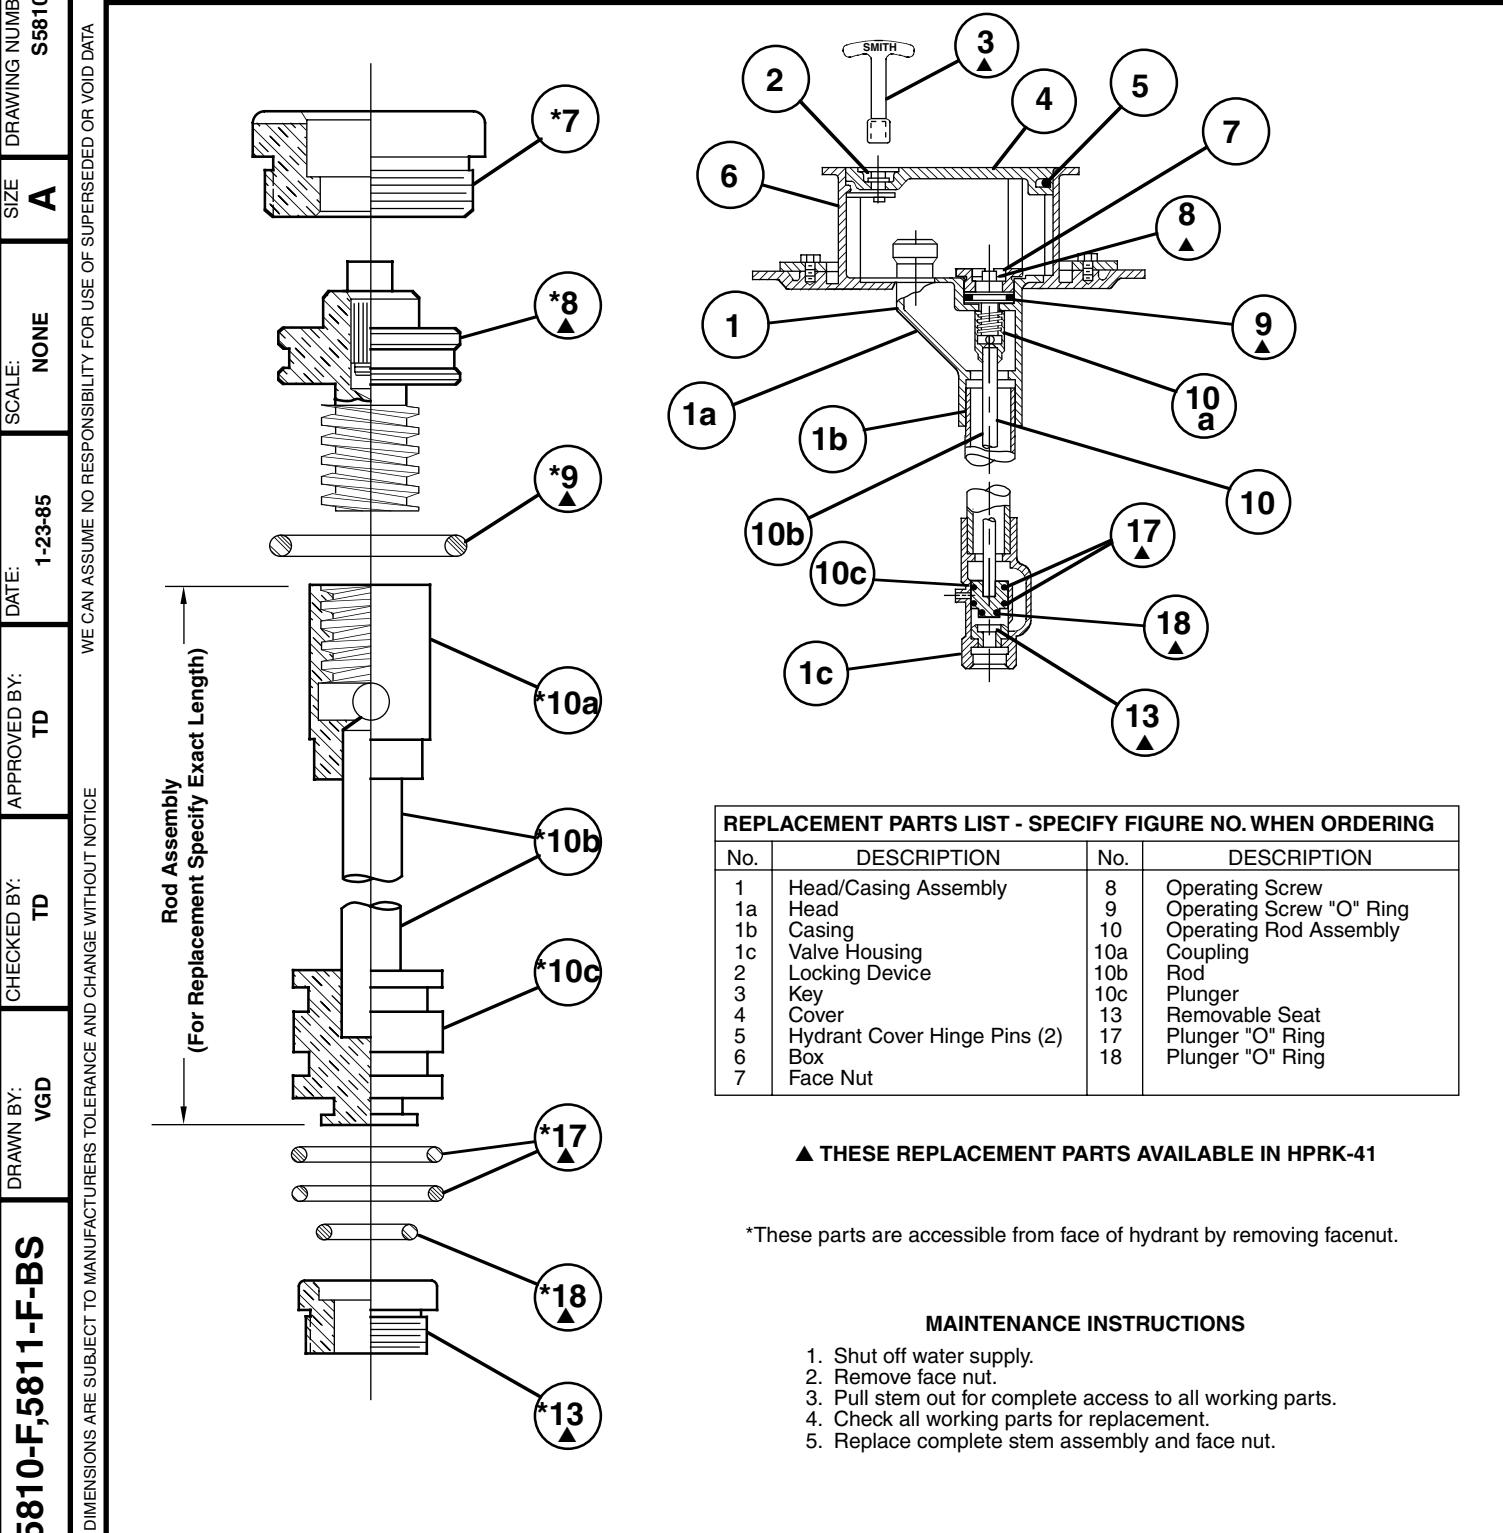


FIGURE NUMBER	B	6-22-93	Added Note Submittal Update	EMB EMB	BS BS	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER
	A	6-29-93						
REV.	DATE	DESCRIPTION	BY	CKD. BY				

DRAWING NUMBER: S5810FBS
 SIZE: A
 SCALE: NONE
 DATE: 1-23-85
 APPROVED BY: TD
 CHECKED BY: TD
 DRAWN BY: VGD
 5810-F,5811-F-BS
 DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE
 WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

▲ THESE REPLACEMENT PARTS AVAILABLE IN HPRK-41

*These parts are accessible from face of hydrant by removing facenut.

MAINTENANCE INSTRUCTIONS

1. Shut off water supply.
2. Remove face nut.
3. Pull stem out for complete access to all working parts.
4. Check all working parts for replacement.
5. Replace complete stem assembly and face nut.