


- ① Position flat gasket on drain body, align holes in gasket with holes in body.
- ② Determine if reversible ring is to be installed in the low (1 1/4" to 2 1/2") or high (2 1/4" to 4 1/4") position.
- 2a Place reversible ring on body and align holes in gasket and body.
- ③ Secure ring to body with 1 1/2" long bolts, insuring neoprene backed washers are installed at proper locations between top of reversible ring and bolt head. Tighten bolts in the following manner: 1, 3, 2 & 4. Tighten No. 1 bolt approximately one full turn then No. 3, No. 2 and No. 4 (same manner as for No. 1). Continue this method until reversible ring has been secured evenly all around.
- ④ Wipe "O" Ring recess in reversible ring clean. Insert "O" Ring in groove of threads at inside diameter of reversible ring. Lubricate "O" Ring in it's entirety with the lubricant provided. Lubricate the remaining threads.
- ⑤ Thread adjustable sleeve into reversible ring and adjust to required height. Do not exceed minimum/maximum adjustment dimensions.
- ⑥ Check bolts a final time to insure tightness.
- ⑦ Run waterproofing membrane over top of adjustable sleeve to inside of bolt circle.
- ⑧ Install flashing clamp and secure with (4) bolts. Again tighten bolts in the 1, 3, 2, 4 manner. (See ③).
- ⑨ Install Dome.

SMITH® JAY R. SMITH MFG. CO.
 DIVISION OF SMITH INDUSTRIES, INC.
 POST OFFICE BOX 3237
 MONTGOMERY, ALABAMA 36109-0237 (USA)
 TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com



MEMBER OF:

PM 2757D

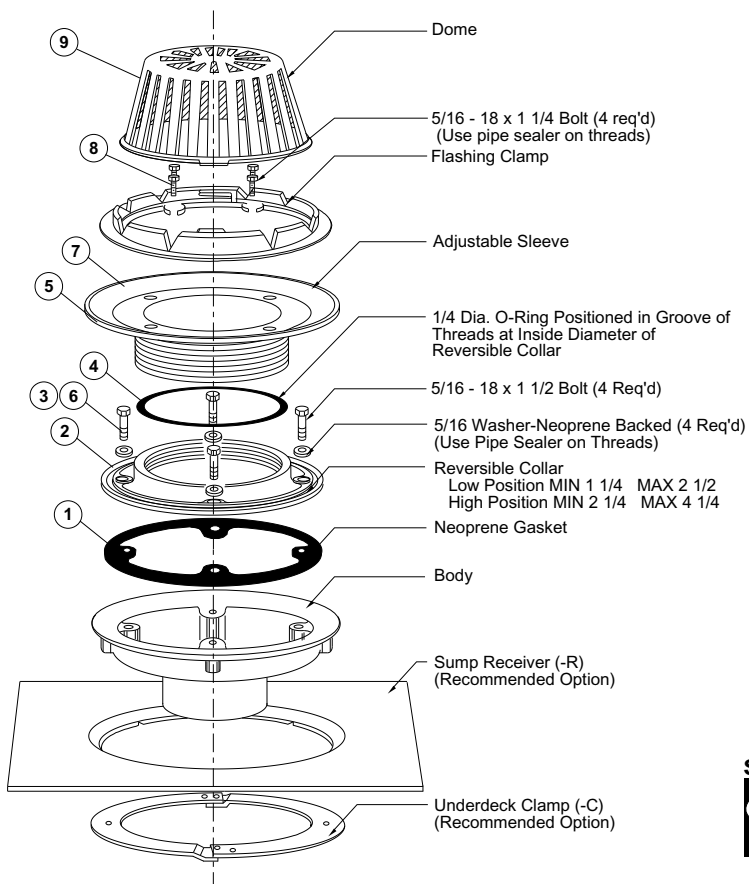

- ① Position flat gasket on drain body, align holes in gasket with holes in body.
- ② Determine if reversible ring is to be installed in the low (1 1/4" to 2 1/2") or high (2 1/4" to 4 1/4") position.
- 2a Place reversible ring on body and align holes in gasket and body.
- ③ Secure ring to body with 1 1/2" long bolts, insuring neoprene backed washers are installed at proper locations between top of reversible ring and bolt head. Tighten bolts in the following manner: 1, 3, 2 & 4. Tighten No. 1 bolt approximately one full turn then No. 3, No. 2 and No. 4 (same manner as for No. 1). Continue this method until reversible ring has been secured evenly all around.
- ④ Wipe "O" Ring recess in reversible ring clean. Insert "O" Ring in groove of threads at inside diameter of reversible ring. Lubricate "O" Ring in it's entirety with the lubricant provided. Lubricate the remaining threads.
- ⑤ Thread adjustable sleeve into reversible ring and adjust to required height. Do not exceed minimum/maximum adjustment dimensions.
- ⑥ Check bolts a final time to insure tightness.
- ⑦ Run waterproofing membrane over top of adjustable sleeve to inside of bolt circle.
- ⑧ Install flashing clamp and secure with (4) bolts. Again tighten bolts in the 1, 3, 2, 4 manner. (See ③).
- ⑨ Install Dome.

SMITH® JAY R. SMITH MFG. CO.
 DIVISION OF SMITH INDUSTRIES, INC.
 POST OFFICE BOX 3237
 MONTGOMERY, ALABAMA 36109-0237 (USA)
 TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com



MEMBER OF:

PM 2757D